Warning before installation

-Power off the Network camera if it is found to be smoking or smells unusual.

-Keep the Network camera away from water. If the Network camera gets wet, power off immediately.

-Do not place the Network camera near heat sources, such as a television or oven.

-Refer to your instruction manual for the operating temperature.

-Keep the Network camera away from direct sunlight.

-Do not place the Network camera in high humidity environments.

-Do not place the Network camera on unsteady surfaces.

-Do not touch the Network camera when there is lightning present.

-Do not disassemble the Network camera.

-Do not drop the Network camera.

-Do not insert any object into the Network camera, such as a screwdriver.

For other safety and regulation information, please refer to “User’s manual”.

1. Check Contents

No.	Item	Description
1	Network Camera	ZN-DTxMTP Series
2	Software CD	User’s Manual, Utility software
3	Quick User Guide	This document
4	Accessories	Bottom Cushion Plate Both-sided Tape Silica-Gel Anchor : 4pcs O-ring : 4pcs Tapping Screw 4x30 : 4pcs Hexalobular L-key Wrench Alarm I/O extension cable Video monitor cable

2. Physical Description

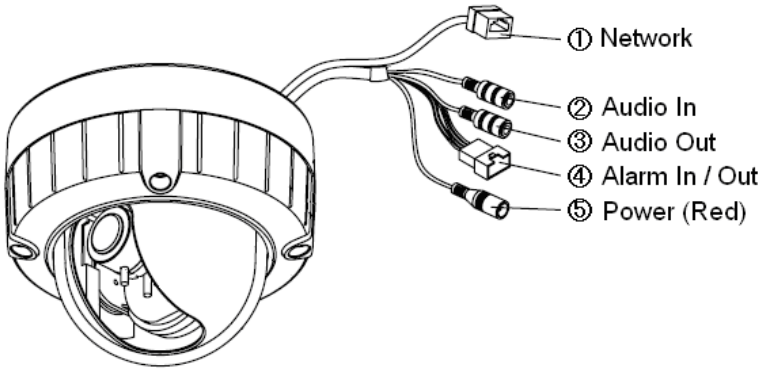

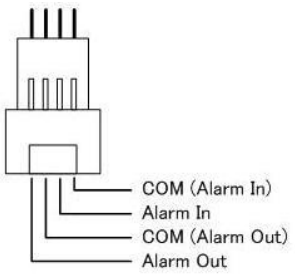

Alarm In / Out connector

1. **Network (RJ-45 PoE supported)**
2. **Audio In (Line in)**
3. **Audio Out (Line Out)**
4. **Alarm In / Out connector**
   (Dry contact / Relay out [0.5A:AC125V/1A:DC30V])
5. **Power (DC12V / AC24V)**

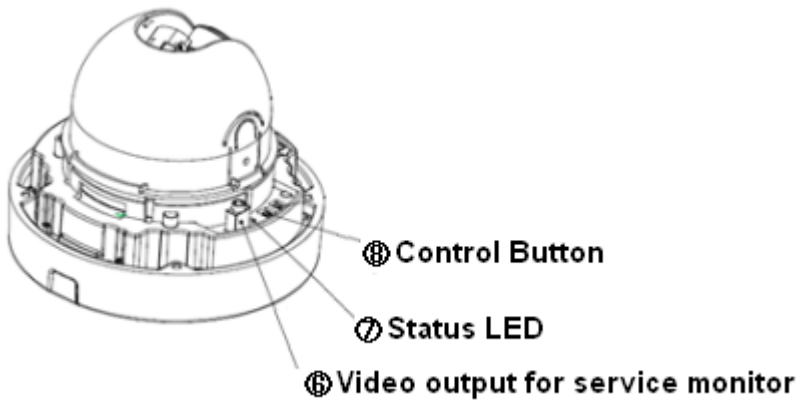

6. **Video output for service monitor**
7. **Status LED**
8. **Control Button**

3. Making Connection

1. **If you have external devices such as sensor or alarms, make connection from connectors.**
2. **Connect Ethernet cable to make connection to the network hub.**
3. **Connect power cable to the camera.**

   When you use PoE function, you don't need to connect power.

4. Assign IP address

The default setting of the camera is set to "DHCP" and "UPnP" function is set to ON. If you have a DHCP server on your network and UPnP function is enabled on your PC you can find the network camera in "My network".

If a DHCP server is not available on your network, please assign IP address by the following process. Default IP address will be shown as 255.255.255.255.

Execute MultiUpgradeTool.exe. It will search cameras on the network automatically.

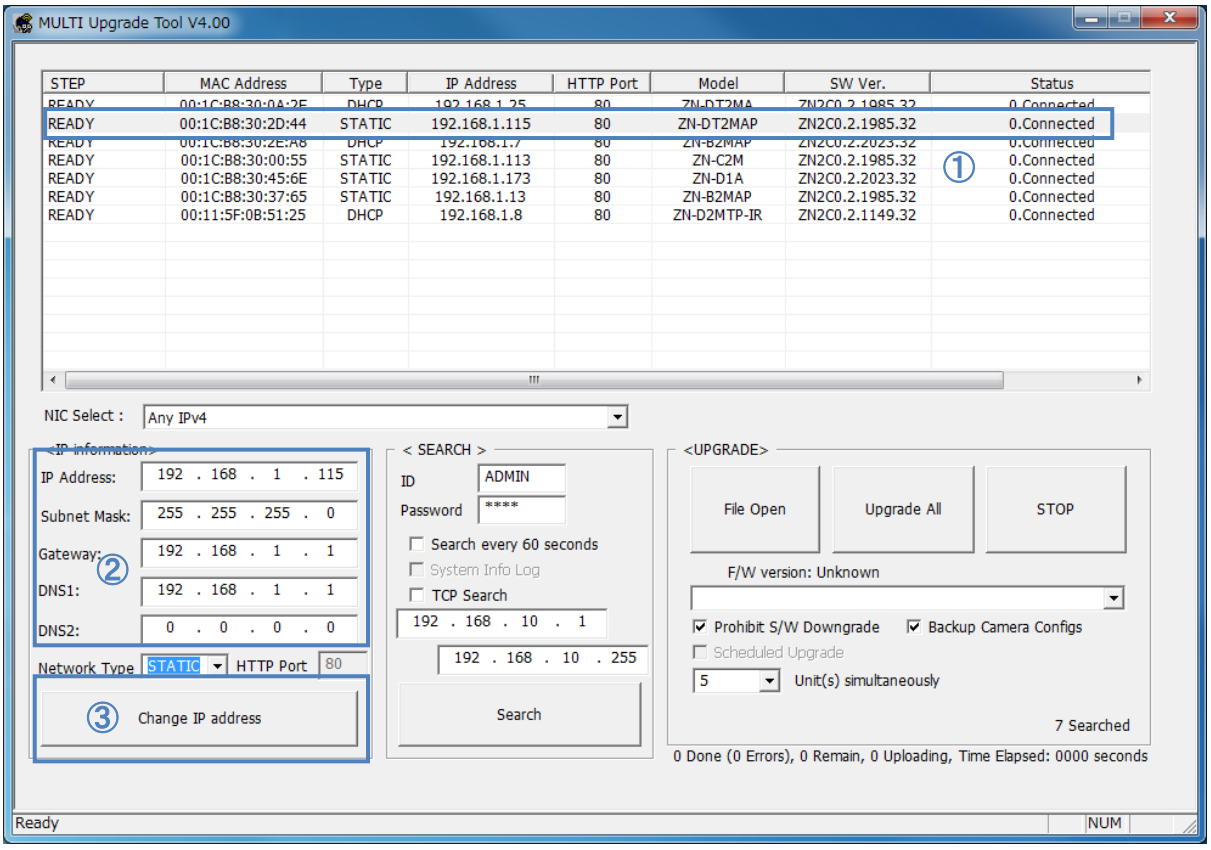
MULTI Upgrade Tool V4.00
STEP
MAC Address
Type
IP Address
HTTP Port
Model
SW Ver.
Status
READY 00:1C:B8:30:2D:44 STATIC 192.168.1.115 80 ZN-DT2MAP ZN2C0.2.1985.32 0.Connected
READY 00:1C:B8:30:00:55 STATIC 192.168.1.113 80 ZN-C2M ZN2C0.2.1985.32 0.Connected
READY 00:1C:B8:30:45:6E STATIC 192.168.1.173 80 ZN-D1A ZN2C0.2.2023.32 0.Connected
READY 00:1C:B8:30:37:65 STATIC 192.168.1.13 80 ZN-B2MAP ZN2C0.2.1985.32 0.Connected
READY 00:11:5F:0B:51:25 DHCP 192.168.1.8 80 ZN-D2MTP-IR ZN2C0.2.1149.32 0.Connected
①
NIC Select : Any IPv4
<IP information>
IP Address: 192 . 168 . 1 . 115
Subnet Mask: 255 . 255 . 255 . 0
Gateway: 192 . 168 . 1 . 1
②
DNS1: 192 . 168 . 1 . 1
DNS2: 0 . 0 . 0 . 0
Network Type STATIC HTTP Port 80
③ Change IP address
< SEARCH >
ID ADMIN
Password ****
Search every 60 seconds
System Info Log
TCP Search
192 . 168 . 10 . 1
192 . 168 . 10 . 255
Search
<UPGRADE>
File Open
Upgrade All
STOP
F/W version: Unknown
Prohibit S/W Downgrade
Backup Camera Configs
Scheduled Upgrade
5 Unit(s) simultaneously
7 Searched
0 Done (0 Errors), 0 Remain, 0 Uploading, Time Elapsed: 0000 seconds
Ready
NUM

1) **After the camera is listed in camera list, select the camera.**
2) **Type in the all network information.**
3) **Click "Change IP address" button to apply settings to the camera.**

When double click the camera in the list, the default web browser (Internet Explorer or compatible equivalent) will open and automatically connect to the camera.

5. Web browser connection

Note : The Network camera supports Internet Explorer 7 or above.
Please check version of your browser and update it if necessary.

When you first access the camera you need to download and install an Active X control from the camera to display a Live image.

Default User and Password are set to “ADMIN” and “1234”.
Please type in the user ID and password to connect the network camera.

Connect to 192.168.1.101
The server 192.168.1.101 at IP-CAM requires a username and password.
Warning: This server is requesting that your username and password be sent in an insecure manner (basic authentication without a secure connection).
User name:
ADMIN
Password:
Remember my password
OK
Cancel

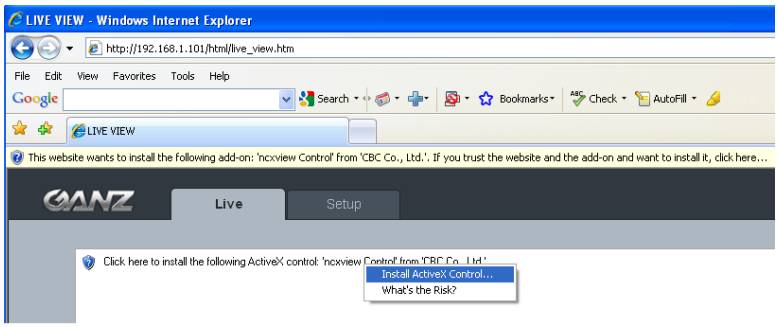
LIVE VIEW - Windows Internet Explorer
http://192.168.1.101/html/live_view.htm
File Edit View Favorites Tools Help
LIVE VIEW
This website wants to install the following add-on: 'ncxview Control' from 'CBC Co., Ltd.'. If you trust the website and the add-on and want to install it, click here...
Live
Setup
Click here to install the following ActiveX control: 'ncxview Control' from 'CBC Co., Ltd.'
Install ActiveX Control...
What's the Risk?

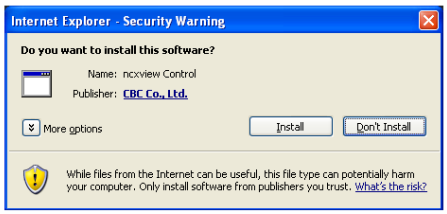
Internet Explorer - Security Warning
Do you want to install this software?
Name: ncxview Control
Publisher: CBC Co., Ltd.
More options
Install
Don't Install
While files from the Internet can be useful, this file type can potentially harm your computer. Only install software from publishers you trust. What's the risk?

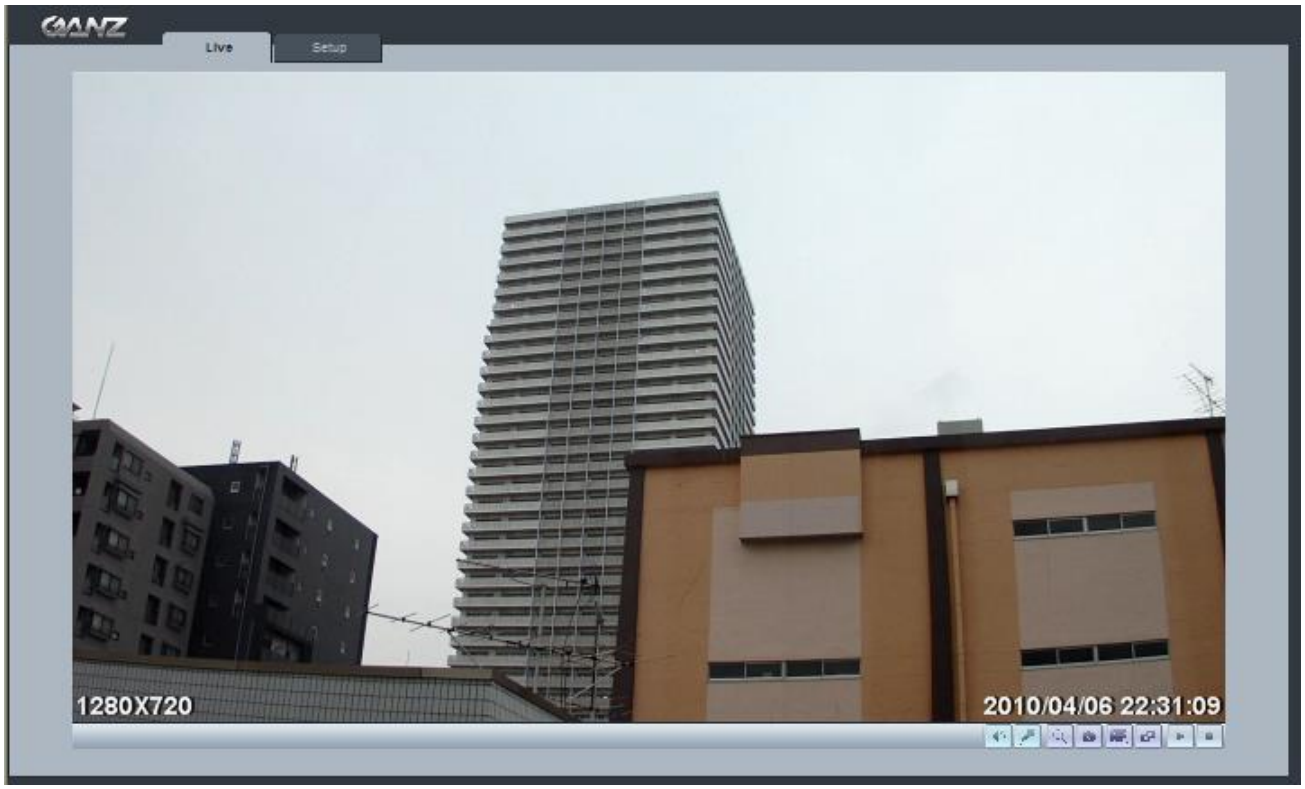

For further information for setup, please refer to User’s manual in software CD.